



Power Module

Example :


When you are using a FnIO setup that requires more than 1.5A for system power (+5) or 10A of field power, you will need to add a ST-7111, ST-7511 expansion power module to ensure that enough power will be available to all the ST Modules.

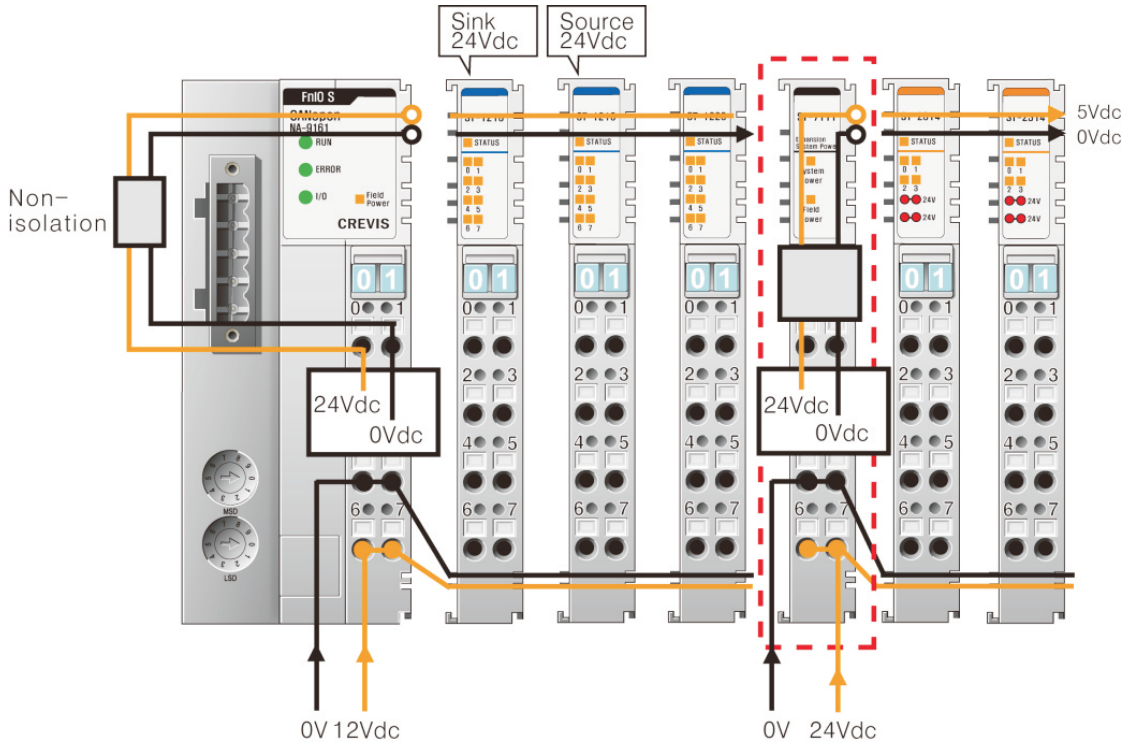

Status LED

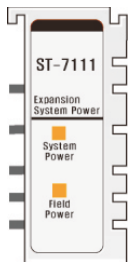

Power	LED Status	Indicates
OFF	OFF	Inactive (Normal)
ON	Green	Active (Normal)

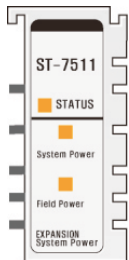

Status	STATUS LED is	Indicates
Not Power	OFF	Device has no expansion Module or May Not is Power.
No Initialized		The Parameter is not initialized yet
Fn-Bus Connection	Green	Fn-Bus Normal Operation
Fn-Bus Ready	Flashing Green	Fn-Bus Ready
Fn-Bus Fault	Flashing Red	Fn-Bus failed Communication
Device Fault	Red	Device Fault