



GT10-50FMB memory board

User's Manual

Manual Number	JY997D31801
Revision	G
Date	Mar. 2012

This manual describes the part names, external dimensions, and specifications of the product. Before use, read this manual and manuals of relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions. And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user. Registration The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective Mar. 2012
Specifications are subject to change without notice.

Safety Precaution (Read these precautions before using.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.

In this manual, the safety precautions are ranked as **⚠ DANGER** and **⚠ CAUTION**.

⚠ DANGER	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
⚠ CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on circumstances, procedures indicated by **⚠ CAUTION** may also be linked to serious results. In any case, it is important to follow the directions for usage.

MOUNTING PRECAUTIONS **⚠ CAUTION**

- Use the GOT in the environment that satisfies the general specifications described in this manual. Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.

OPERATION PRECAUTIONS **⚠ CAUTION**

- Power OFF the GOT, and then connect securely the memory board to the specified connector in the GOT. Poor connection may cause malfunction.
- Do not power OFF the GOT or do not remove the memory board while the screen data is transferred. Such action may destroy the data.
- Remove static electricity charged in the human body before handling the memory board. Make sure to wrap the memory board in the attached antistatic sheet during transportation. Static electricity may damage the stored data and elements.

DISPOSAL PRECAUTIONS **⚠ CAUTION**

- When disposing of the product, handle it as industrial waste.

Compliance with EC directive (CE Marking)

This note does not guarantee that an entire mechanical module produced in accordance with the contents of this note will comply with the following standards. Compliance to EMC directive for the entire mechanical module should be checked by the user / manufacturer. For more details please contact the local Mitsubishi Electric sales site.

Attention

- This product is designed for use in industrial applications.
- Manufactured by: Mitsubishi Electric Corporation
2-7-3 Marunouchi, Chiyoda-ku, Tokyo 100-8310 Japan
- Manufactured at: Mitsubishi Electric Corporation Himeji Works
840 Chiyoda-machi, Himeji, Hyogo 670-8677 Japan
- Authorized Representative in the European Community:
Mitsubishi Electric Europe B.V.
Gothaer Str. 8, 40880 Ratingen, Germany.

Requirement for Compliance with EMC directive

The following products have shown compliance through direct testing (to the identified standards) and design analysis (forming a technical construction file) to the European Directive for Electromagnetic Compatibility (2004/108/EC) when used as directed by the appropriate documentation.

Type :Programmable Controller (Open Type Equipment)

Standard	Remark
EN61131-2 : 2007 Programmable controllers- Equipment, requirement and tests	EMI Compliance with all relevant aspects of the standard. (Radiated Emissions)
	EMS Compliance with all relevant aspects of the standard. (ESD,RF electromagnetic field, EFTB, Surge, RF conducted disturbances and Power frequency magnetic field)

For more details please contact the local Mitsubishi Electric sales site.

Related Manuals

The following manuals are relevant to this product. When these loose manuals are required please consult with our local distributor.

Manual name	Manual Number (Model Code)	Contents
GT10 User's Manual	JY997D24701 (09R819)	Describes the GT10 hardware-relevant content such as part names, external dimensions, mounting, wiring, specifications, and introduction to option devices. (sold separately)

1. Overview

The memory board GT10-50FMB (hereinafter referred to as "memory board") is designed to be attached to the GT105□ or GT104□ for data copy between itself and the GOT.

1.1 Features

- Screen data can be transferred (read and written) between the memory board and the GOT without using the drawing software.
- Screen data can be efficiently written to multiple GOTs.

2. Specifications

2.1 General Specifications

Item	Specifications
Operating ambient temperature	0 to 40°C
Storage ambient temperature	-20 to 60°C
Operating/Storage ambient humidity	10 to 90% RH, non-condensing (The wet bulb temperature is 39°C or less.)
Operating atmosphere	Must be free of lamp black, corrosive gas, flammable gas, or excessive amount of electro conductive dust particles and must not be exposed to direct sunlight (during operation and storage).


2.2 Power Supply Specifications

Item	Specifications
Input power supply voltage	3.3VDC (+3% -3%), supplied from the GOT unit

2.3 Performance Specifications

Item	Specifications	
Memory	Type	Flash ROM
	Life (Number of write times)	100,000 times
Switch	Protection switch	Slide switch : Switch to prevent the memory board from being read to the data
Connector		1ch : Connector for GOT connection

3. Part Names and External Dimensions

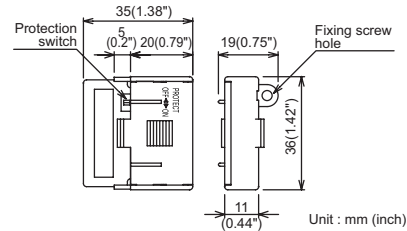

Unit : mm (inch)

4. Operation Method


4.1 Installation using utility function

Select OS or project data stored in the memory board, and then transfer it to the GOT using the utility function.

Operation procedure

- 1) Check whether the protection switch in the memory board is set to ON or OFF.*1

*1: When the protection switch in the memory board is set to ON, copy from the GOT to the FMB is disabled (protected). Make sure to set to OFF the protection switch for executing copy from the GOT to the FMB.

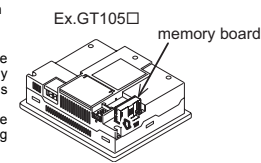

- 2) Confirm that the GOT is powered OFF, and then attach the memory board to the memory board connector on the rear of the GOT.
- 3) Power ON the GOT, and select "GT10-50FMB" on the utility main menu.

4) Select the copy direction

- GOT→FMB: Copy from the GOT to the memory board
- FMB→GOT: Copy from the memory board to the GOT

After selecting the direction, touch the [OK] button. To abort copy, touch the [ABORT] button.





5) Select the copy target.

- OS+Projectdata : Copies the standard OS, communication driver, project data and font data
- Projectdata : Copies the project data


After selecting the copy target, touch the [OK] button. To return to the copy direction setting screen, touch the [CANCEL] button.

When "GOT→FMB" and "OS + Projectdata" are selected in the GOT whose standard monitor OS is Ver. 01.11.** or later, the font data transfer confirmation screen appears. Select either data, and touch the [OK] button.

- 6) Confirm the copy direction and copy target. When they are set correctly, touch the [OK] button. To change the setting, touch the [CANCEL] button.

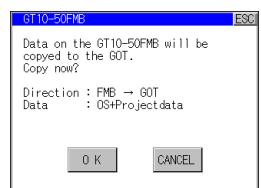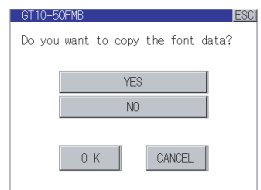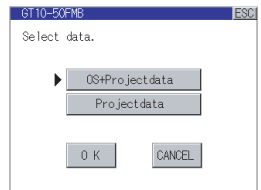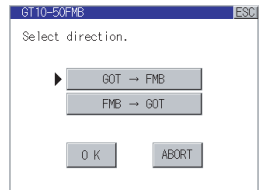

- 7) Copy is completed. Touch the [ESC] button to close the screen. If an error occurs during copy, an error message appears.

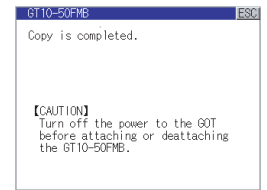


When only the project data was copied to the GOT, touch the [ESC] button to restart the GOT and display the user-created screen. When the standard OS was copied, the GOT will automatically start up and display the user-created screen. (If the project data does not exist, a message appears to notify that the project data does not exist.)

4.2 Installation at power on of GOT

Operation procedure


- For 2-point press: Use this method to transfer all of the OS and project data stored in the memory board to the GOT when the GOT is powered ON.

- 1) Power OFF the GOT, and attach the memory board which stores the standard OS and communication driver to the GOT.
- 2) While touching the upper left corner and lower left corner of the GOT screen, power ON the GOT.
- 3) Perform the steps 6) and 7) of Section 4.1.

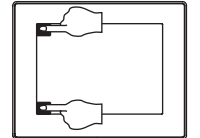

- For 1-point press: Use this method to transfer the OS and project data stored in the memory board to the GOT after selecting the copy direction and copy target when the GOT is powered ON.

- 1) Power OFF the GOT, and attach the memory board which stores the standard OS and communication driver to the GOT.
- 2) While touching the upper left corner of the GOT screen, power ON the GOT.
- 3) When the [Select mode] window appears, select the [GT10-50FMB].
- 4) Perform the steps 4) of Section 4.1.

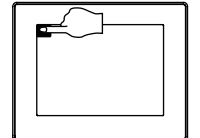

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; opportunity loss or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

⚠ For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.



HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
HIMEJI WORKS : 840, CHIYODA CHO, HIMEJI, JAPAN